


Sigineer Power's 120/240V Split phase inverter is an international model which can be used in 120/240V systems in America and also 230Vac single phase systems.

Users from 230Vac 50Hz single phase
electricity system(230Vac L+N+G)
must strictly follow
our wiring instructions, or damage to
inverter will occur.

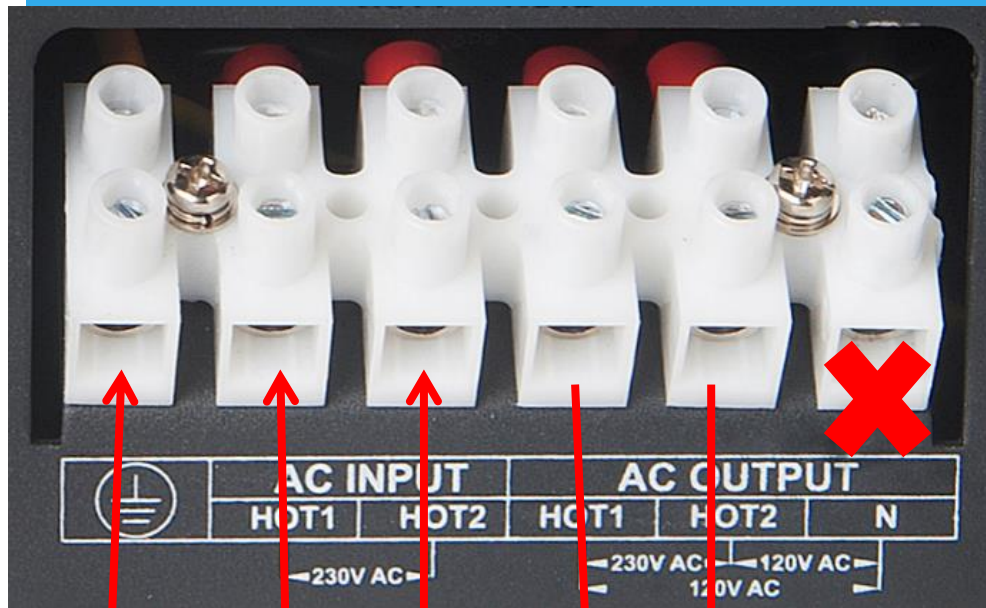

L N
INPUT

L N
OUTPUT



AC terminal printing

- 1 Connect Ground wire to Ground terminal.
- 2 Connect Input Hot to AC input Hot1.
- 3 Connect Input Neutral to AC input Hot2.
- 4 Connect Output Hot to AC output Hot1.
- 5 Connect output Neutral to AC output Hot2.
- 6 **LEAVE THE RIGHT PIN UNCONNECTED, DON'T CONNECT INPUT NEUTRAL TO IT.**

