

Solar Pump Inverter User's Manual

For Asynchronous Motor

2200W to 22000W

Version 2.0 (PN:60000-2021188)



Last Edition: Sep 6th 2021

Manufacturer Information

Sigineer Power Limited

Email: info@sigineer.com

TEL: +86 769 82817616

US Warehouse: 4415 S 32nd St, Phoenix AZ 85040

Table Of Contents

Information on this Manual	1
Validity	1
Scope	1
Target Group.....	1
Safety Instructions	1
Symbols	2
Introduction.....	3
Solar Pumping System.....	3
Features.....	3
Product Overview	4
Installation	4
Unpacking and Inspection	4
Mounting the Unit	5
Wiring Introduction.....	6
Terminal Introduction.....	6
Assemble DC Connector	7
Assemble AC Output Connector	7
Assemble AC Input Connector.....	9
Assemble sensor Connector.....	10
Wiring of Water Level Sensor.....	11
Recommended Diameter of Wire	12
Operation	13
Display Panel.....	13
LCD Display Information.....	13
Parameters Setting	14
1. Work Mode Setting.....	15
2. Conduct parameter setting for the motor	16
Function Parameters	19
Troubleshooting	22
Specifications	23

Information on this Manual

Validity

This manual is valid for the following solar pump inverters:

P2.2ST (Single phase/Three Phase 220Vac, with AC input)

P4KST (Single phase/Three Phase 220Vac, with AC input)

P4KT3 (Three Phase 380Vac, with AC input)

P7.5KT3 (Three Phase 380Vac, without AC input)

P11KT3 (Three Phase 380Vac, without AC input)

P15KT3 (Three Phase 380Vac, without AC input)

P18.5KT3 (Three Phase 380Vac, without AC input)

P22KT3 (Three Phase 380Vac, without AC input)

Scope

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations.

Target Group

This document is intended for qualified persons and end users. Tasks that do not require any particular qualification can also be performed by end users. Qualified persons must have the following skills:

- ▶ Knowledge of how a pump inverter works and is operated
- ▶ Training in how to deal with the dangers and risks associated with installing and using electrical devices and installations
- ▶ Training in the installation and commissioning of electrical devices and installations.
- ▶ Knowledge of the applicable standards and directives
- ▶ Knowledge of and compliance with this document and all safety information

Safety Instructions

WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

Inspection



If missing components or damaged inverter is found after receiving, please do NOT install or operate it. Otherwise, it may cause human injury or equipment damage.

Installation



1. Before installation, please make sure if the voltage range of PV panel meets the requirement.
2. Check if all wires are firmly connected without short circuit. Otherwise, it will cause equipment damage.
3. Do NOT install this inverter under direct sunlight because high temperature may cause equipment damage.
4. Please install the inverter away from inflammable and explosive objectives. Please ensure no liquid can enter the inverter.
5. Please install the inverter on metal non-combustible surface.



1. **CAUTION!!** Only qualified personnel can install and operate this inverter.
2. To reduce risk of electric shock, disconnect power source before making wire connection. Otherwise, it may cause electrical shock.
3. To reduce risk of electric shock, NEVER touch any terminals on electric circuits.
4. If connection cable between inverter and water pump is more than 50m, please be sure to install a three-phase AC reactor. Inductance value for each phase is about 1mH. Otherwise, water pump would be easily to be damaged.

Operation





1. Only after wire connection is complete and put cover back to the inverter, it's Enter to do commissioning. Otherwise, it will cause electric shock
2. If sunlight is sufficient but little water is pumped, maybe the wires on motor connection are reversely connected. Please reverse any two wires of them.
3. When testing water pump, be sure to install water pump at appropriate water level. Never allow water pump in dry running. Otherwise, the inverter will activate protection.







Maintenance




1. Only qualified personnel can maintain, repair, inspect the inverter and replace any components.
2. It may still contain energy after disconnecting power source within 5 minutes. Only service after the bus voltage is within safe range.

Symbols

	Grounding Wire of Equipment
	AC

	DC
	Phase
	Before operating inverter, please read the instruction.
  <u>minutes</u> <u>5</u>	In order to avoid electric shock, cut off the inverter from PV terminal and AC terminal for at least 5 minutes, then contact the wire of machine output terminal and input terminal.
	Warning: when machine works, the temperature of metal shell may be very high.

Introduction

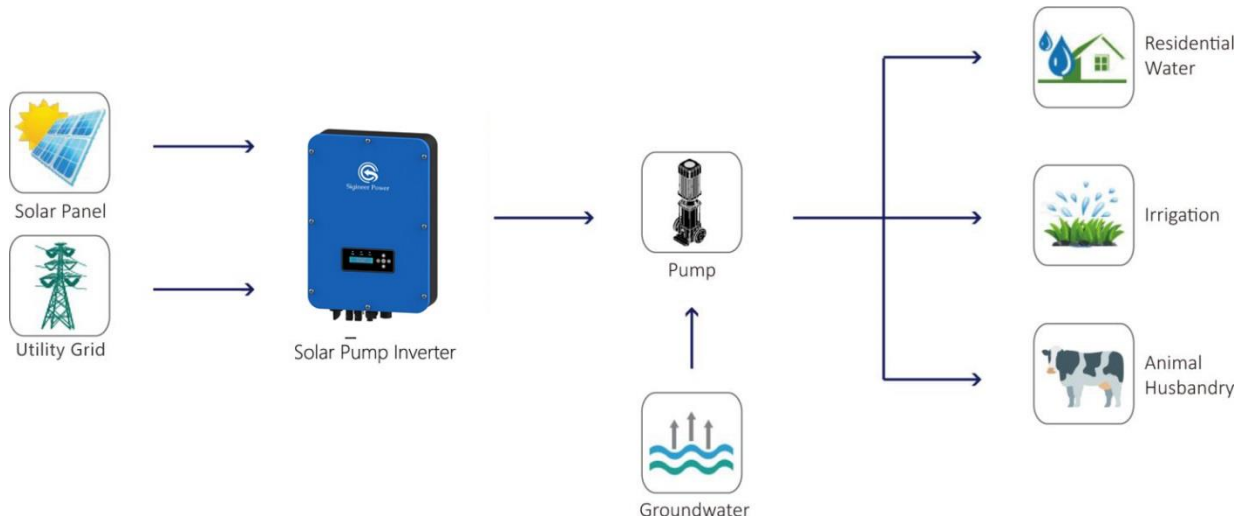

Solar Pumping System

The SMP solar pump inverter is built-in with MPPT solar charger with wide PV input of 450Volts and 900 Volts, it converts DC current into three phase or single phase alternating current to driver asynchronous motors in pumps.

Its variable frequency drive (VFD) technology adjusts the motor frequency from 0 to maximum according to the PV production.

The solar pump inverter power ranges from 2200 watts to 22KW .

Its powerful software allows users to customize the specifications such as motor rotate speed, work mode, motor rotation direction.

The AC backup mode on the 2200W unit will automatically power the pump with AC input when PV production is insufficient or constantly use AC input to power it.

The inverter can operate automatically and requires no human presence on-site.

The Communication port will work with water level sensors in the well and tank to avoid flooding and exhausting.

A GPRS module can be plugged to the inverter for remote monitoring or powering it on or off on the phone.

The fanless aluminum enclosure is IP65 graded, waterproof for harsh outdoor applications.





Features

1. Rated power ranging from 2200W to 22KW
2. Variable Frequency Drive (VFD) Technology with Soft start function, max DC to AC efficiency 97.6%
3. Inbuilt MPPT solar controller with BOOST circuit for broad PV voltage range, max efficiency 99.8%
4. AC power input capability for 2200W/4000W model
5. IP65 protection level, for harsh outdoor applications.
6. Comprehensive LCD and LEDs display real-time system status
7. Powerful software for customizing user setting

8. Lightning Protection

9. Remote monitoring through GPRS module (Sold Separately)

Product Overview

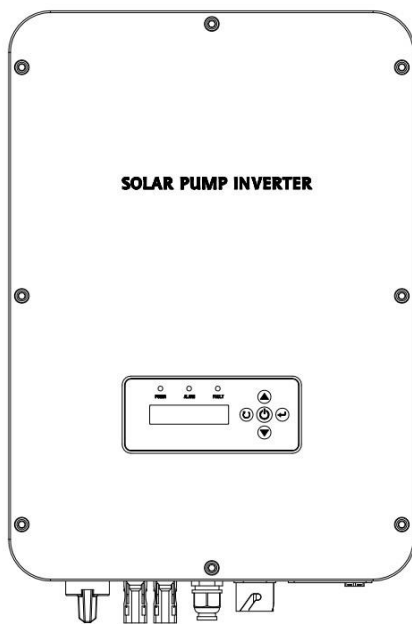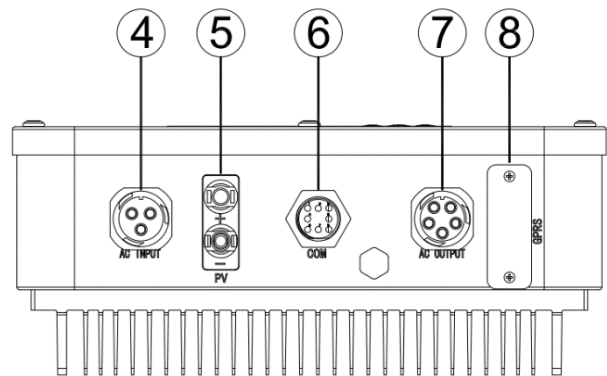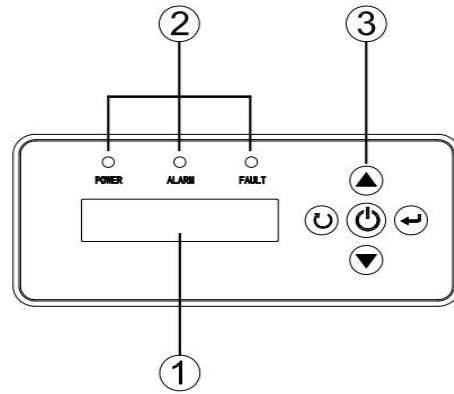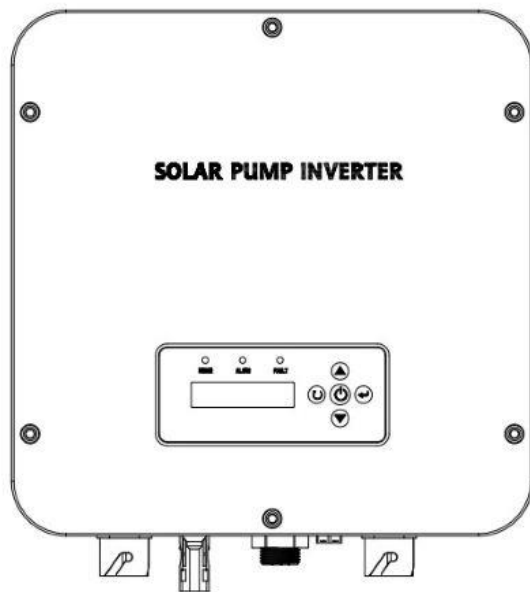

- 1: LCD display
- 2: LED indicators
- 3: Function buttons
- 4: AC input Connector
- 5: PV input Connector
- 6: Water level sensor port
- 7: AC output Connector
- 8: GPRS communication port(works with GPRS module)

Installation

Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged.



You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- Accessory(Connector) x 1 set


Mounting the Unit

Consider the following points before selecting where to install:


- Do not mount the inverter on flammable construction materials.
- Mount on a solid metal surface.
- Avoid direct sunlight. Be sure the environment is shady and cool.
- Be sure to install the inverter into a box with waterproof and dustproof.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

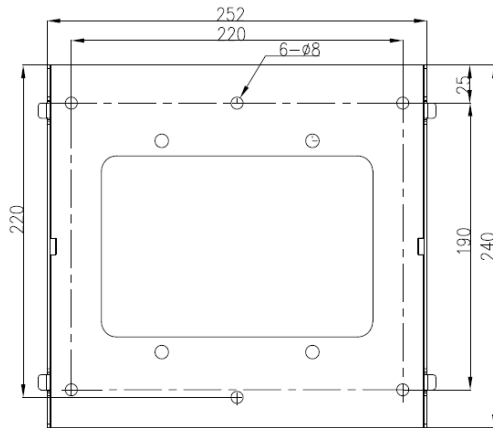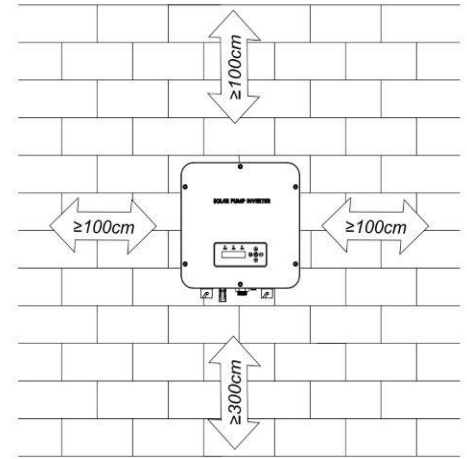


Single phase 220V 2.2kw

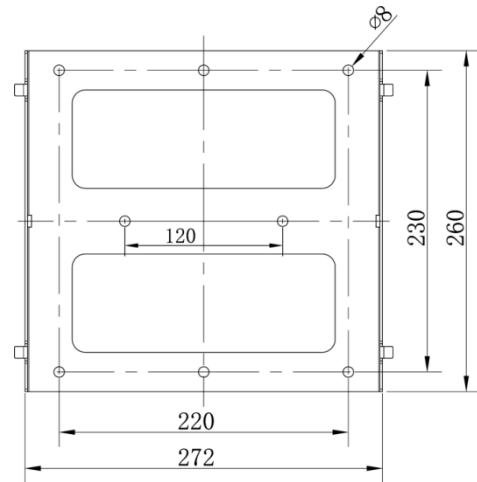

Single phase 220V 4kw

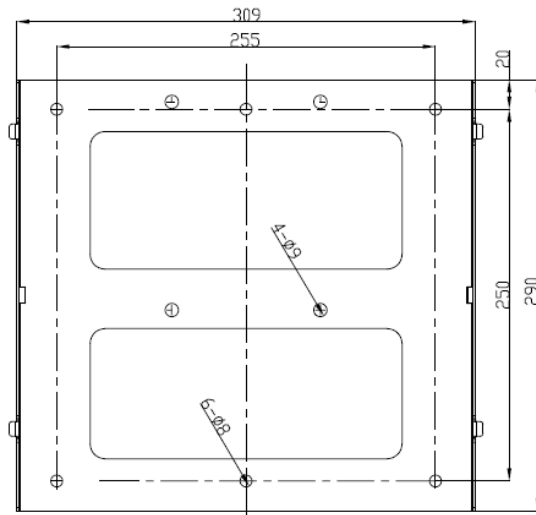

3 phase 380V 7.5kw-11kw


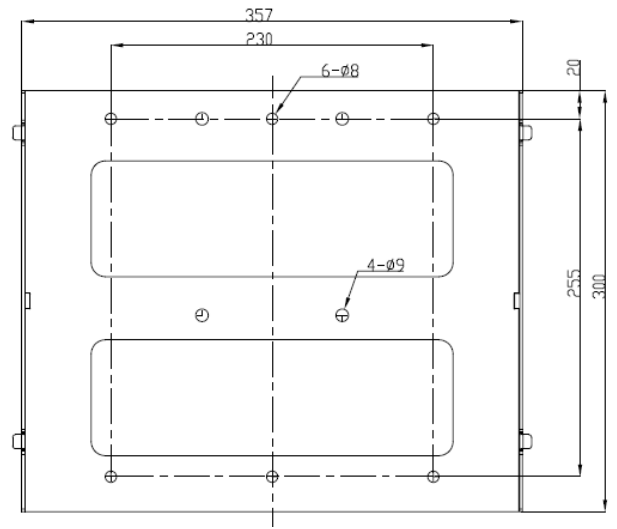


3 phase 380v 13kw-22kw





SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install Safety Nut

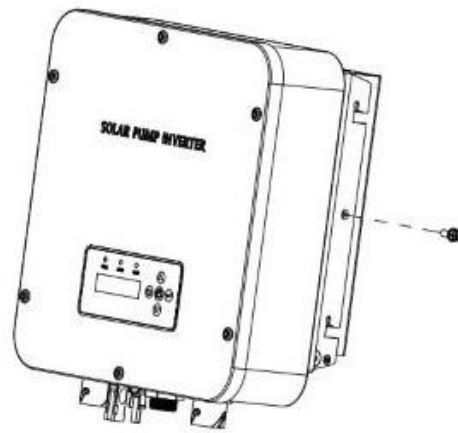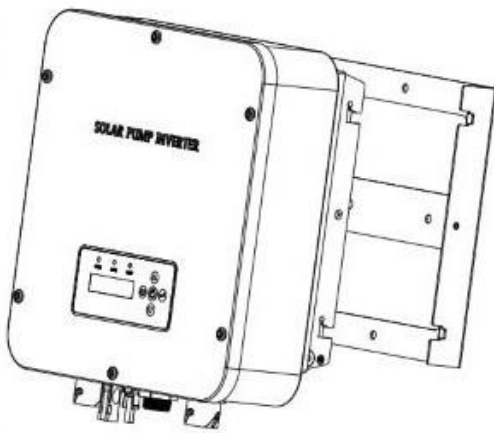

Wiring Introduction

There is AC input, DC input, water level sensor connection terminal, GPRS, and AC output terminal.

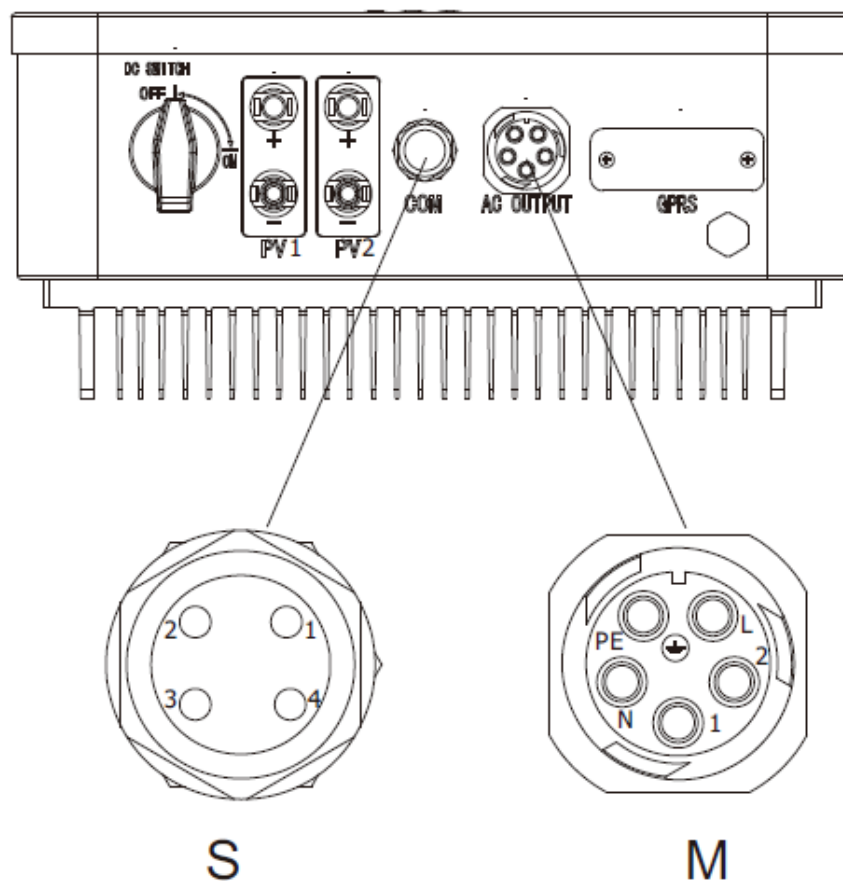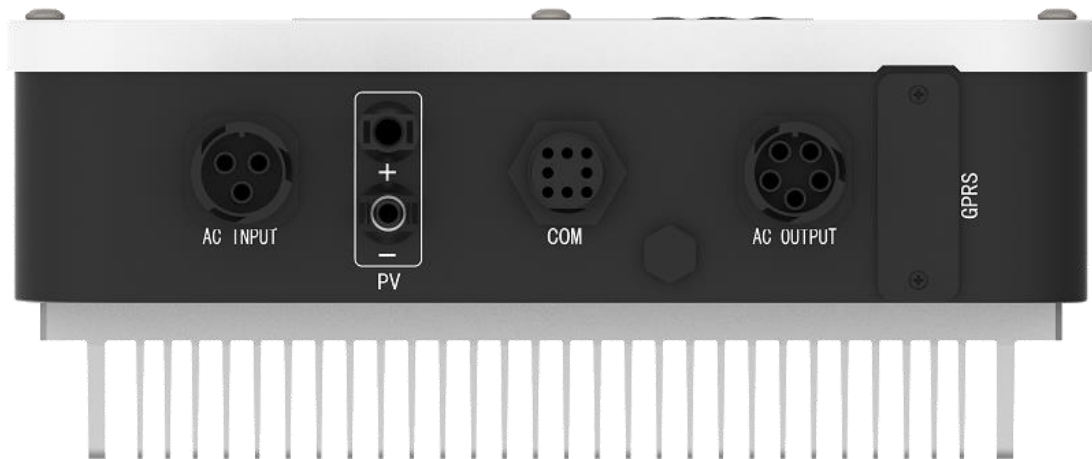

Terminal Introduction

Connector	Terminal Introduction	Wiring Introduction
PV	PV+	Connect with the positive pole of solar array
	PV-	Connect with the negative pole of solar array

AC Input For 220V(Available only on 2.2KW)	L	Connect with power grid L phase
	N	Connect with power grid N phase
	PE	Connect with protective ground wire
AC Output (3 PH motor connect 1, 2, L) (1 PH motor connect 1, L)	1	Connect with motor U phase
	2	Connect with motor V phase
	L	Connect with motor W phase
	PE	Connect with protective ground wire
COMMUNICATION Port	1	Connect with Sensor 2 of water tank
	2	Connect with Sensor 2 of water tank
	3	/
	4	/
	5	Connect with Sensor 1 of water well
	6	Connect with Sensor 1 of water well
GPRS Port	1	+5V
	2	TXD-232
	3	RXD-232
	4	GND

For models with AC input, it only accepts 220Vac voltage on the L and N pins, this power can be from single phase L+N, split phase L+L or 2 hotlines of 3 phase power systems.
The communication port works with water sensors, the inverter will stop with when the sensor signal is “Closed”.



Warning: The places of input sockets of DC positive pole and negative pole of different models are different.



Warning: The signal marshalling sequence of AC output sockets of different models are different.


Wanting: It is recoimmeded to wire the AC output PE to ground, the inverter can still operate without ground, special precaustion should be taken.

Assemble DC Connector

Strip the cable 6-8mm,then connect the bare wire core into core tube of connector.



Crimp contact barrel by using a hex crimping die. Put the contact barrel with striped cable in the corresponding crimping notch and crimp the contact. Insert the core tube into slot of connection until hear the sound indicating fit in place.

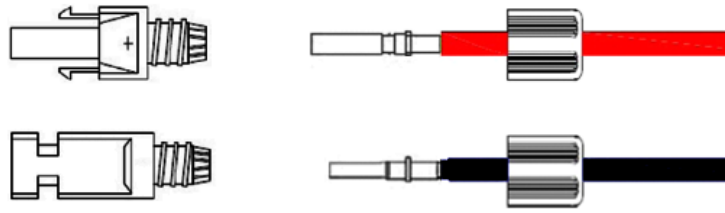

Tighten the nuts to finish the wiring.




Warning: Risk of electric shock! Before shifting solar panel, disconnect the pump inverter AC and DC. Besides, allow 5-minute internal capacitance discharging.

Assemble AC Output Connector


Connection to the AC output side terminal for the solar pump inverter, there are two types of wiring for the AC connector.

For type I of 3 phase AC output: AC connector 1,2,L,PE connect with the pump through 4 wires (U wire, V wire, W wire and PE wire)

For type II of 1 phase AC output: AC connector L, 1,PE connects with the pump through 3 wires (L wire, N wire and PE wire)

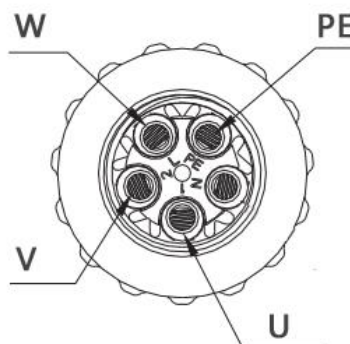


type I

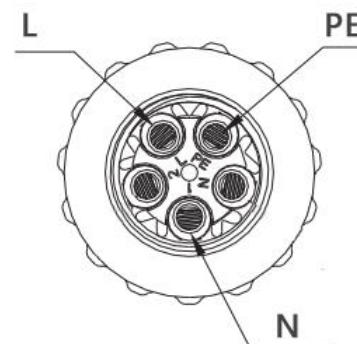


type II


Remove the parts of the AC connection plug from the accessory bag. Guide the pressure screw sealing right, threaded sleeve over the AC cable.

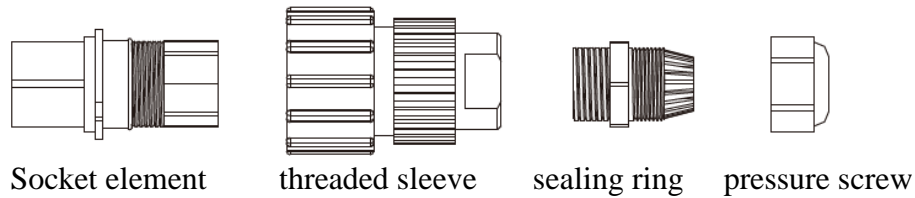


Insert the stripped and bared conductors U, V, W, PE in to screw terminals with sign U, V, W, PE on the socket element and tighten the screws.

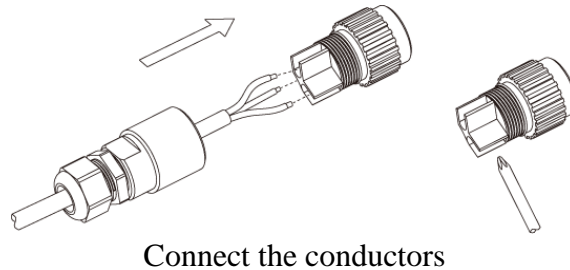

Push the threaded sleeve in to the socket element. Screw the pressure screw tightly onto the threaded sleeve.

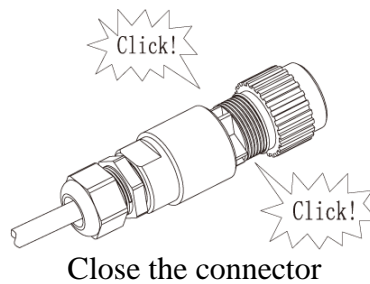


Insert the AC connection plug into the AC connection receptacle on the inverter.

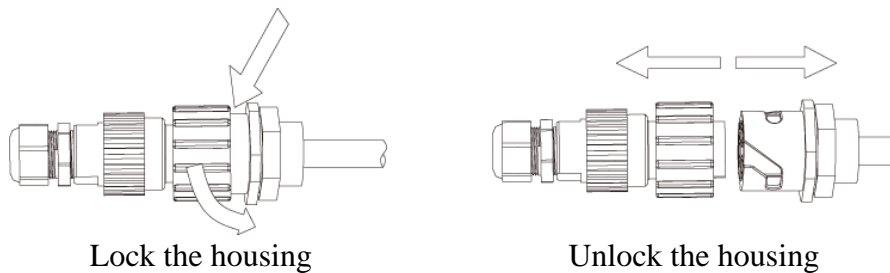


Assemble AC Input Connector

Remove the parts of the AC connection plug from the accessory bag. Guide the pressure screw sealing right, threaded sleeve over the AC cable.

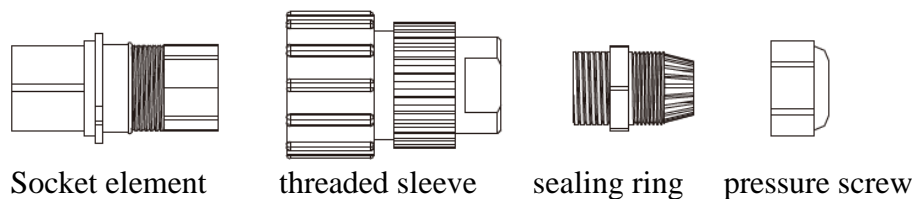


Insert the stripped and bared conductors L, N, PE in to screw terminals with sign L, N, PE on the socket element and tighten the screws.

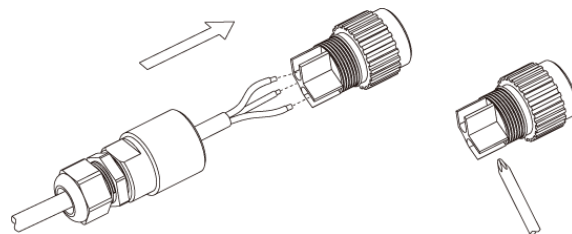


Connect the conductors

Push the threaded sleeve in to the socket element. Screw the pressure screw tightly onto the threaded sleeve.

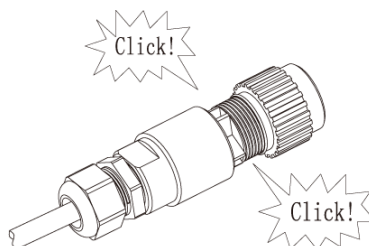


Close the connector

Insert the AC connection plug into the AC connection receptacle on the inverter.

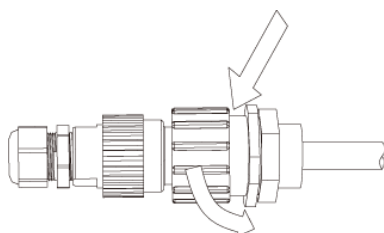

Lock the housing

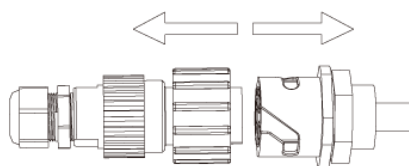


Unlock the housing

Assemble sensor Connector


The series inverter has one 8 Pin signal connector, signal cable ports:

Pin number	Wiring Introduction
1	Connect with sensor of tank
2	Connect with sensor of tank
3	/
4	/
5	Connect with sensor of well
6	Connect with sensor of well

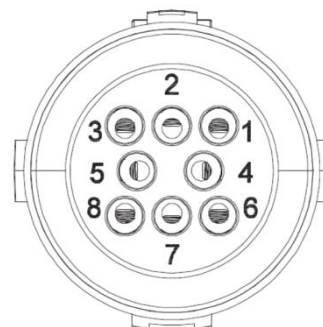


7	/
8	/


Insert the stripped and bared cable through pressure screw, seal ring, threaded sleeve in sequence, insert cables into connection terminal according to number indicates on it and tighten the screws firmly. Please try to pull out the wire to make sure the it is well connected.

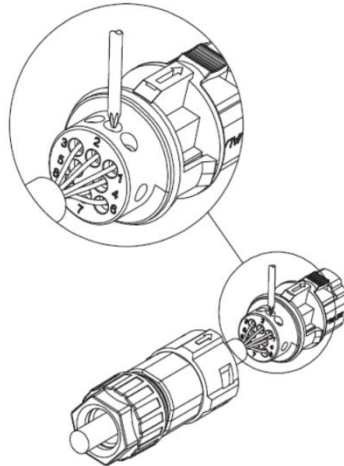


Push the threaded sleeve into the socket. Tighen up the cap on the terminal.

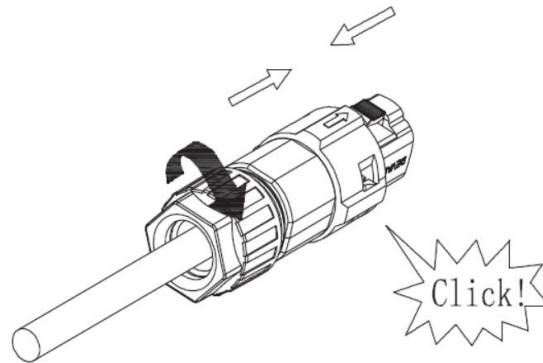


Push the threaded sleeve to connection terminal until both are locked tightly on the inverter

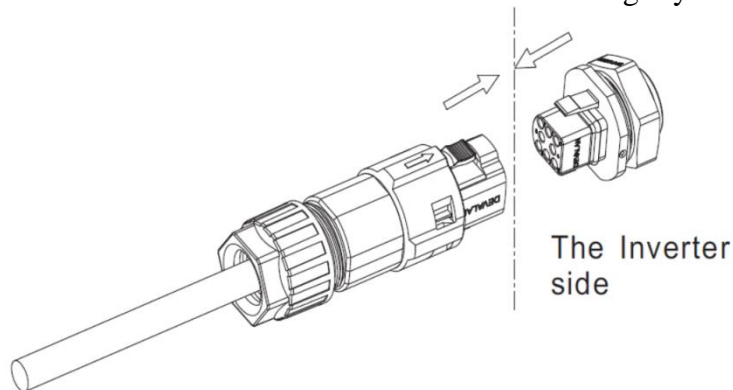

Press the fasteners and pull it out form the inverter.

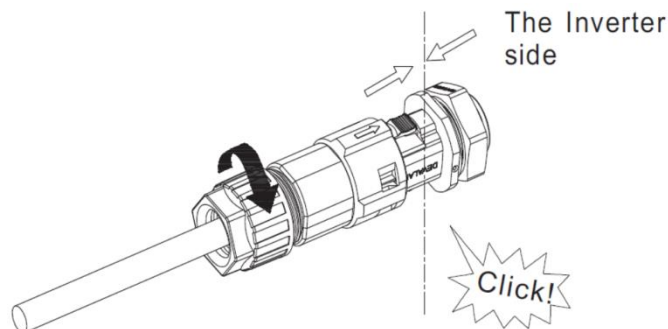

Wiring of Water Level Sensor

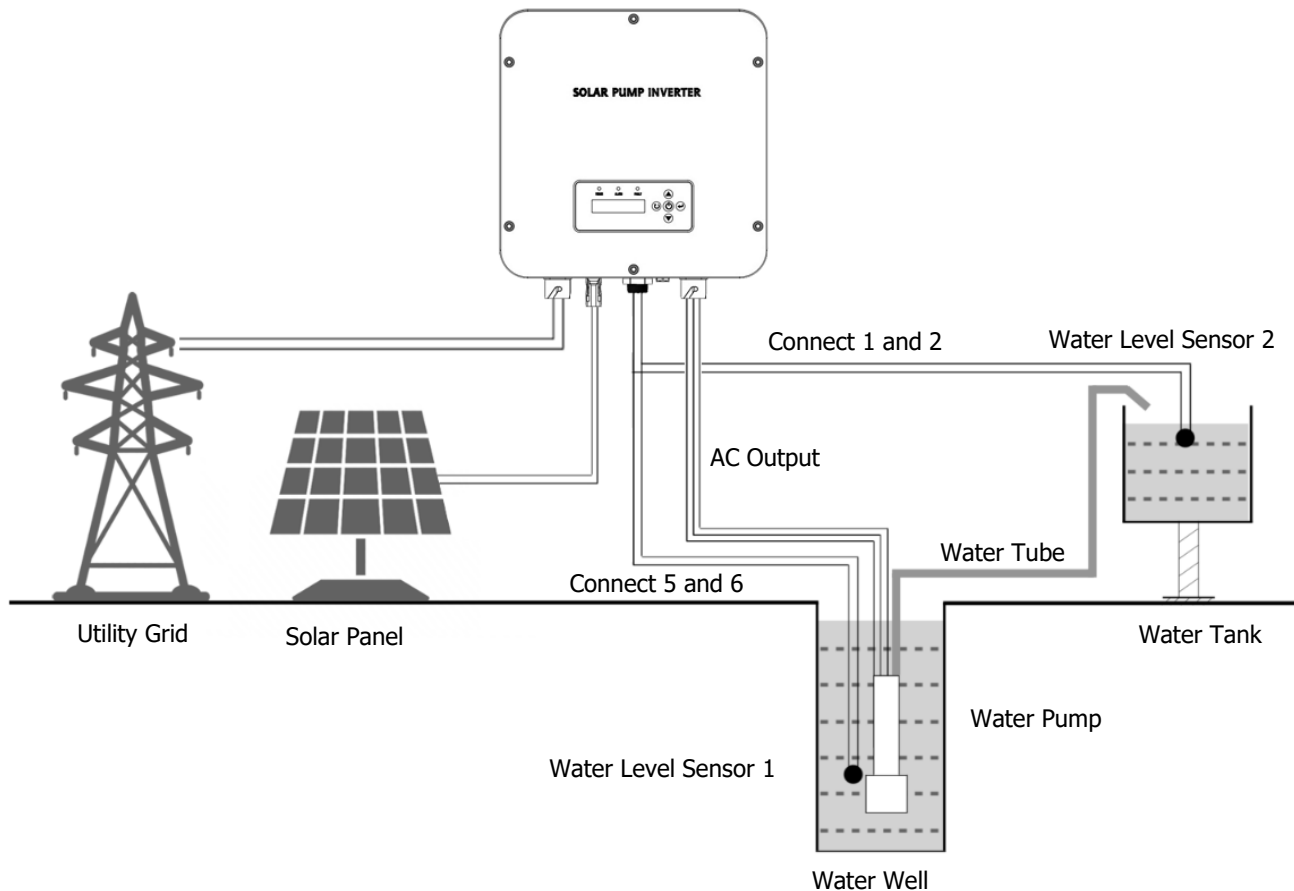

⚠ Notice: connect water level sensor 1 and detect water shortage. Respectively connect two signal lines of sensor with 5 and 6 of COM terminal. When water level sensor 1 detects that the water level of well is lower than the level set by sensor, the pump inverter will delay for 5s, then turn off output protecting pump. The water level recovers. Wait for 20s, then the pump inverter re-works normally.

⚠ Notice: connect water level sensor 2 to detect whether water is full. Connect two signal lines of sensor with 1 and 2 of COM terminal. When water level sensor 2 detects that the water level of water tank exceeds the level set by sensor, the pump inverter delays for 5s and turns off output; when water level is lower than set level, wait for 20s, then pump inverter re-starts to work normally.

Recommended Diameter of Wire Units: mm²

Model	Recommended output current(A)	Output voltage(V)	length≤30m	length≤60m	length≤90m	length≤120m	length≤150m	length≤180m	length≤210m
P2.2KST	14	1PH /3PH 220V	2.5	2.5	4	6	6	6	6
P4KST	16	1PH /3PH 220V	1.5	2.5	2.5	6	6	6	6
P7.5KT3	18	3PH 380V	2.5	2.5	4	6	6	10	10
P11KT3	24	3PH 380V	4	4	6	10	10	10	16
P13KT3	28	3PH 380V	6	6	6	10	10	10	10
P15KT3	30	3PH 380V	6	6	6	10	10	16	16
P18KT3	39	3PH 380V	6	6	10	10	16	16	25
P22KT3	45	3PH 380V	10	10	10	16	16	25	25



Notice: The environment temperature for the above recommended wire dimension should $\leq 50^{\circ}\text{C}$.




Notice: Large-power wall-mounted model uses multiple-channel DC input. The dimension of DC wire of each






channel shall be selected according to the above table.

Operation

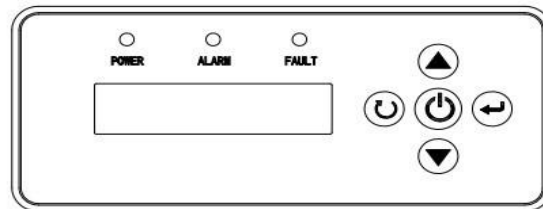Display Panel

Solar pump inverter uses LCD operation panel. The operation panel is shown in the figure, including 3 LED lights, LCD display and 5 keys.



Indicator and Key	Name	Function Introduction	
POWER	System running indicator	Green	LED on, inverter is running
ALARM	Warning indicator	Yellow	LED on, warning or LED flashing in auto operation mode
FAULT	Failure indicator	Red	LED on, system failure
	Operation / Stop Key	1. Press for a short time, then the inverter starts control; 2. Press for 2s, then inverter stops control.	
	Confirm / Programming Key	1. Press for a short time to enter programming mode. After altering parameter, “press for a short time” to confirm the alteration 2. Press for 2s to enter the programming menu.	
	Increment Key	1. When control parameter displays state, increase parameter number or parameter value; 2. When operation displays data state, according to operation mode, increase output frequency or display current operation data.	
	Decrement Key	1. When control parameter displays state, press for a short time to decrease parameter number or parameter value. 2. When operation shows data state, according to operation mode, decrease output frequency or display current operation data.	
	Return Key	Return the initial display	

LCD Display Information



The LCD display information includes operation data, control parameters, and historical parameters. The information on the display will be switched in turns by pressing UP/DOWN key. The selectable information will be switched as below.






Description	Display
Output frequency of the inverter	Running Frequency=50.00Hz Freq Run 50.00Hz
Set frequency of the inverter	Set Frequency=50.00Hz Freq Set 50.00Hz
Input voltage of the inverter	Input PV voltage=548V PV Volt. 548 V
Output voltage of the inverter	Output voltage=379V Output Volt. 379 V
Output current of the inverter	Output current=0.7A Output Curr. 0.7 A
The relative value of rated power	Power capacity=79.1% Capacity +79.1%

Parameters Setting

1. Work Mode Setting


The inverter includes three work modes: manual work mode, fully-automatic terminal work mode, GPRS work mode (optional). The default mode is fully-automatic terminal work mode.

- a. Manual work mode: menu P00. Setting P00.01=0. Press  key to operate. Press  key for 2s, then the inverter stop working.
- b. Fully-automatic terminal work mode: menu P00. Setting P00.01=1. When sunlight is strong enough, the inverter will automatically trace maximum power point.
- c. GPRS work mode (optional): menu P00. Setting P00.01=2. Under this mode, combined with cellphone number, send messages to set startup, shutdown(enter sleep mode), parameter inquiry, etc.

Description	Display
Initial status: non-historical data display	
Enter the main parameter modification interface for long press 2s for Enter key 	P00 parameter group, Work Mode group Work Mode P00
Press Enter key  , to enter view the P00.01	P00.01 sub parameter group Work Mode P00.01
Press Enter key  , to enter the P00.01(the factory set is 1)	00.01, value =1 (Default), terminal work mode Work Mode 1
Use Down key  , edit it to 0 (controlled by keyboard)	P00.01, value =0, manual work mode Work Mode 0
Press Enter key  , to save the parameter value and display Set OK!	Present: Set OK ! Work Mode Set OK !

2. Rated parameters setting for the motor

Before setting the parameters, please make sure all the wiring is correct.

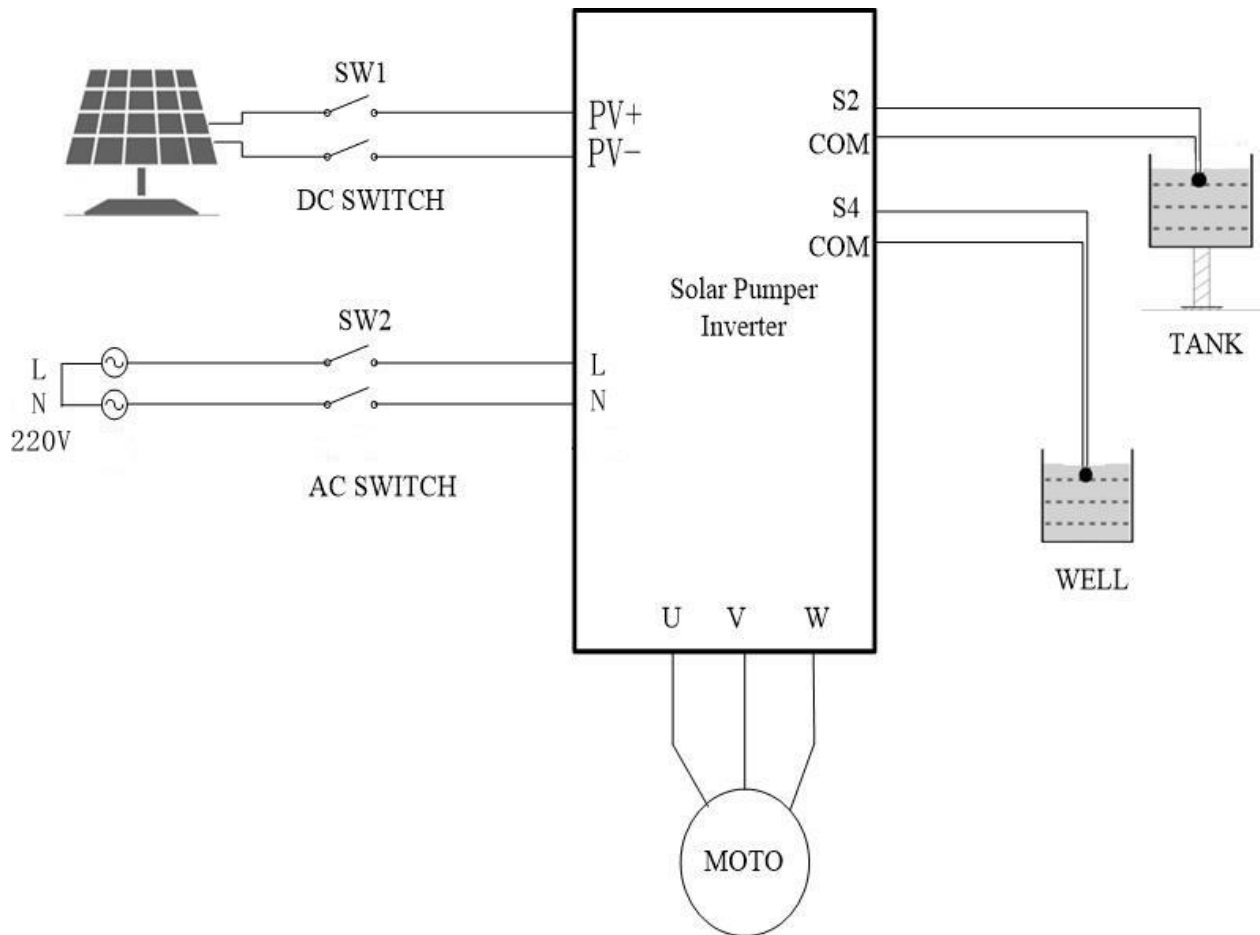


- a. Set P00.01=0. Manual operation mode settings.
- b. Set water pump nameplate parameters: P02.01 motor rated power value; P02.02 motor rated power value; P02.04 motor rated voltage value; P02.05 motor rated current value.
- c. Water output test of pump
Click the run button to observe the running frequency and water output. Under the normal strong light condition, if the working frequency is low or the water volume is small, it indicates that the motor line may be connected reversely, so it is necessary to set function code P00.13=1 or exchange the wiring of two motor lines.
- d. After finishing parameter setting of water pump, set P00.01=1. The operation code channel is altered as original automatic mode instruction.

Notice: If the inverter fails, set P00.18 to restore the factory settings.


Parameters Setting

1. Work Mode Setting


The inverter includes three work modes: manual work mode, fully-automatic terminal work mode, GPRS work mode (optional). The default mode is fully-automatic terminal work mode.

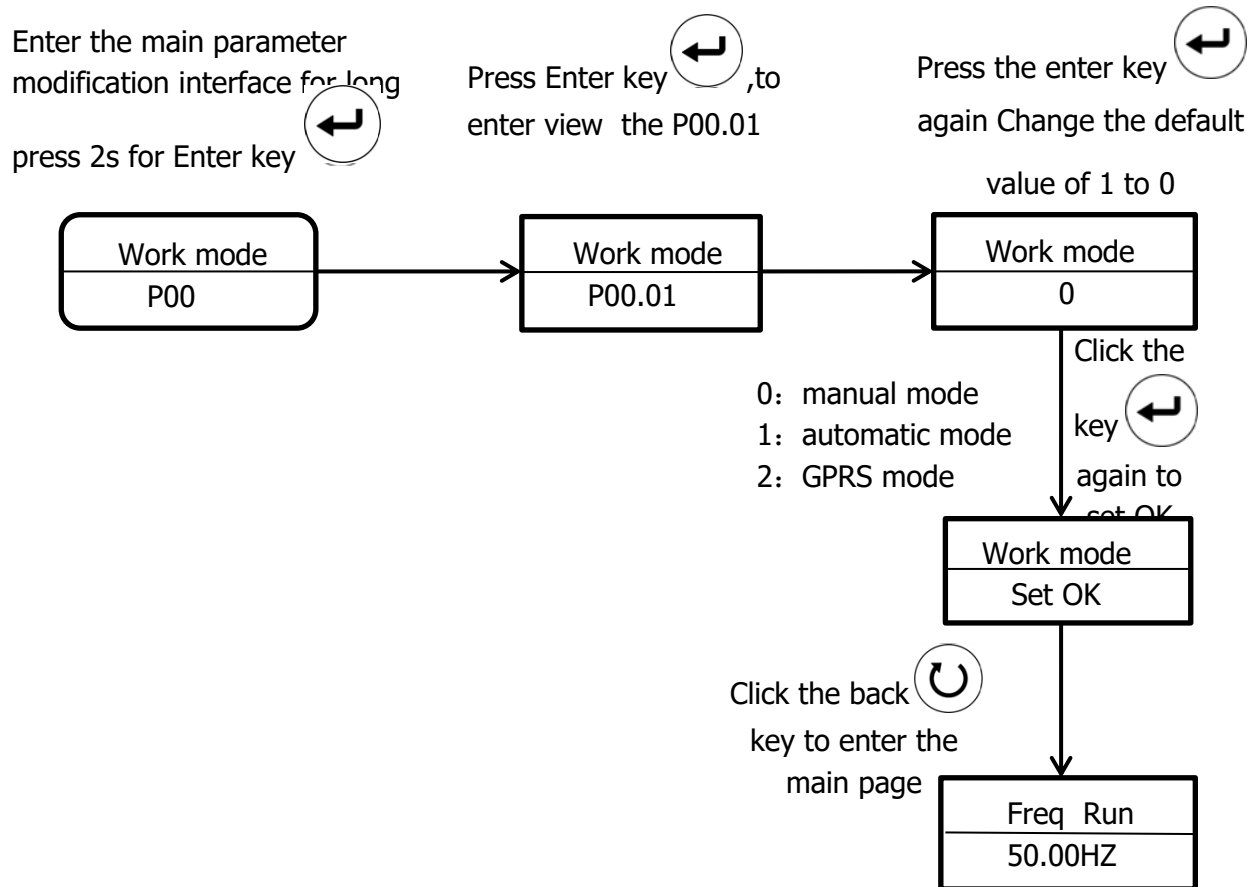


Parameter Setting (Example)

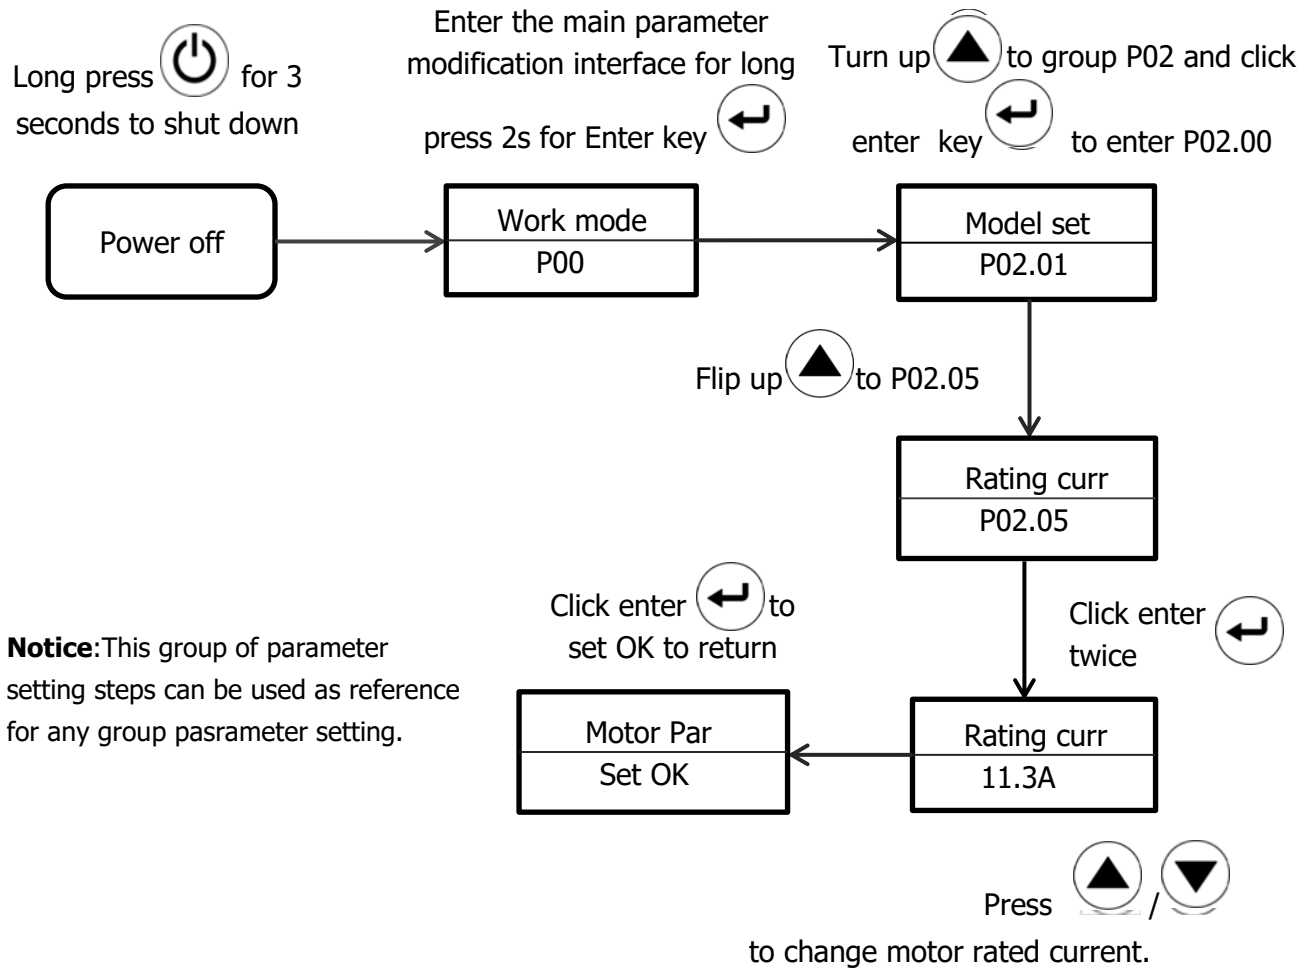

Factory Data Reset

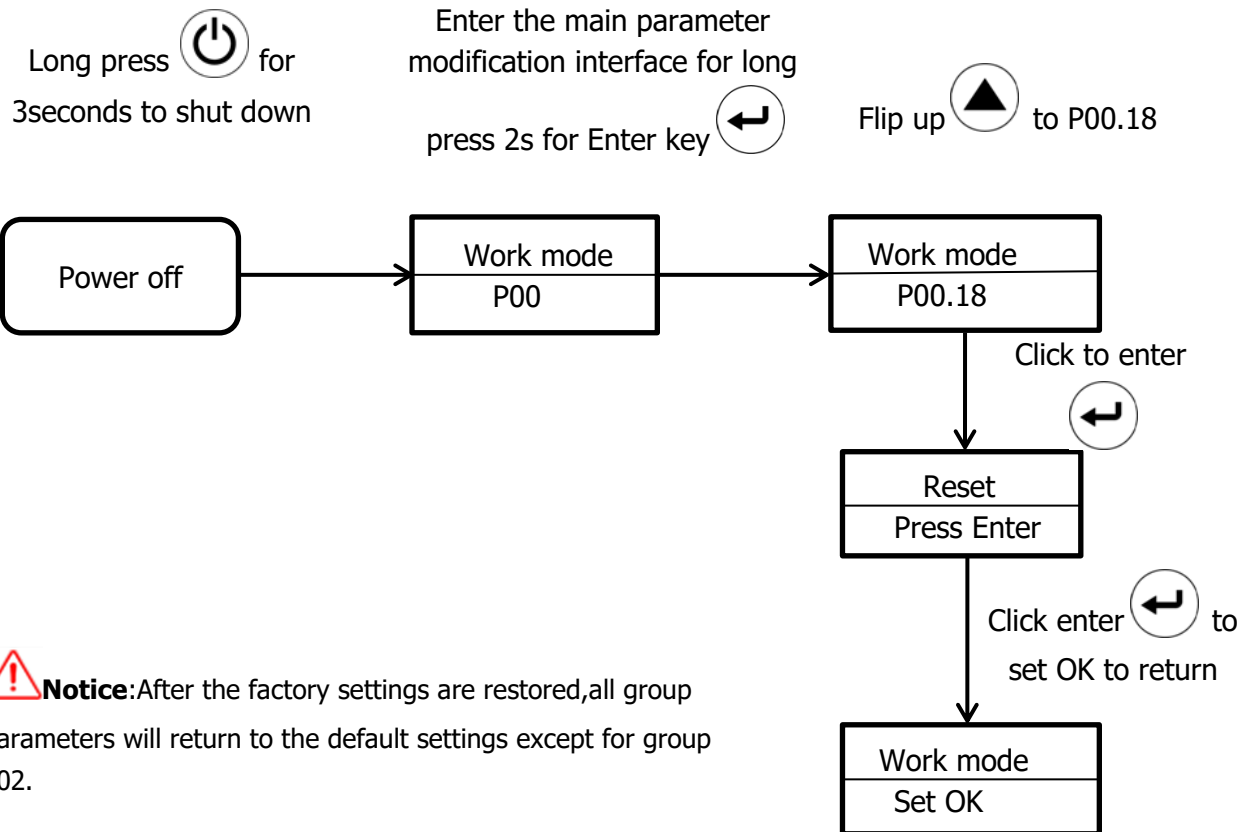

Notice: The set value of the parameter cannot be modified on the running state. if inverter is in auto mode, but you need to set value of the parameter. First setting P00.01=0, manual operation mode settings, press  for 2s, then inverter stops control. then you can set the P00~P15 group of function parameter.

Warning: Do not change parameters at random, otherwise the system might not work normally.

Function Parameters

SN	Name	Scope	Introduction	Default Value
P00.01	Run command model	0~2	0: manual operation mode 1: auto operation mode 2: communication operation mode	1
P00.03	MAX. Output frequency	P00.04~400.00Hz	The parameter is used to set the maximum output frequency of the inverter	50.00Hz


P00.04	Upper limit of the running frequency	P00.05~P00.03	The parameter is the upper limit of the output frequency of the inverter which is lower than or equal the maximum frequency	50.00Hz
P00.05	Lower limit of the running frequency	0.00Hz~P00.04	If the solar energy is not sufficient to power the motor, inverter will drop frequency running. The inverter will stop run when the running frequency lower than the lower limit frequency	0Hz
P00.13	Set direction	0~2	0: The inverter runs in the forward direction 1: The inverter runs in the reverse direction 2: Forbid to run in reverse direction	0
P00.18	Function restore parameter	0~1	0: No operation 1: Restore to the default values	0
P01.08	Stop mode	0~1	0: Decelerate to stop 1: Coast to stop	0
P02.01	Rated power of asynchronous motor	0.1~3000.0kw	Set this parameter according to rated power on the pump nameplate NOTE: when resetting the rated power of the motor(P02.01), you can initialize the motor parameter of (P02.02~P02.05)	Model confirmation
P02.02	Rated frequency of asynchronous motor	0.01Hz ~ P00.03	Set this parameter according to rated frequency on the pump nameplate	50.00Hz
P02.04	Rated voltage of asynchronous motor	0 ~ 1200V	Set this parameter according to rated voltage on the pump nameplate	Model confirmation
P02.05	Rated current of asynchronous motor	0.8 ~ 6000A	Set this parameter according to rated current on the pump nameplate	Model confirmation
P02.27	Motor overload protection factor	20.0%~120.0 %	The pump motor over-load protection factor when over-load, please refer to the rated current of motor to set this parameter.	100.0%
P15.00	PV Inverter Selection	0: Disable 1: Enabled	0: means the MPPT function is invalid 1: means the MPPT function is enabled	1
P15.04	PID Max. Output Frequency	P15.05~100.0%	P15.05~100.0%(100% corresponding to P00.03) P15.04 is used to limit the Max. value of target frequency	100.0%
P15.05	PID Min. Output Frequency	0.0%~P15.04	0.0%~P15.04(100% corresponding to P00.03) P15.05 is used to limit the Min. value of target frequency	20.0%

P15.13	Full-water delay	0~10000S	Time setting of full-water delay	5S
P15.14	Wake-up delay when full-Water	0~10000S	During the full-water warning, if the detected full-water signal is cleared, the delay counts, after the time set by P15.14,the warning is cleared.	20S
P15.16	Operation time of water pump Dry-run	0.0~1000.0S	Set the operation time of Dry-run operation. Under the continuous Dry- run operation, the inverter will stop run, if the operation time is reached.	60.0S
P15.17	Current detection of automatic Dry-run protection	0.0~100.0%	0.0%: If it is 0.0%,it is determined by the inverter 0.1%~100.0%:It is determined by P15.17 100% corresponds to the rated motor current. If the target frequency and the absolute value of the ramp frequency is less than or equal P15.19,and the current corresponding to the current frequency is less than P15.17, after the time set by P15.16, the inverter will stop run; otherwise,it will operate normally.If the state is not continuous,the delay counting will be cleared automatically.	50.0%
P15.18	Reset delay of water pump Dry- run	0.0~1000.0S	Dry-run protection recovery time. The operation time and reset time are counted at the same time, It is bigger than P15.16.After the time set by P15.18-P15.16, the inverter will reset.	120.0S
P15.19	Lag frequency threshold	0.00~200.00 Hz	P15.19 is the lag frequency for the analysis of Dry-run operation. If the target frequency and the absolute value of the ramp frequency is less than or equal P15.19, the current will be compared.	0.50Hz
P15.20	Delay Time of Weak Light	0.0~3600.0S	If the output frequency is less than or equal to the lower limit of PI output frequency and the state lasts for the set value by P15.20, the inverter will stop run.If the state is not continuous, the delay counting will be cleared automatically. NOTE:If the PV voltage is lower than software undervoltage point, it will stop run and no need to wait for the set time. If P15.29=0,the system will swith to the AC input when the light is weak.	100.0S

P15.21	Delay time of wake-up at weak light	0.0~3600.0S	If the PV voltage is higher than the starting voltage, after the delay time, it will run again. when P15.29=0, if the PV voltage is higher than 120V, after the delay time, it will switch to solar input model.	300.0S
P15.29	PV input and AC input selection	0~2	0: Automatic input, the system will switch between PV and AC input according to the detected PV voltage and threshold. 1: Forced AC input 2: Forced PV input Threshold setting for switch to AC input. For models of 220V: 0.75KW:60.0V 1.5KW~4.0KW:80.0V For models of 380V: 2.2KW~5.5KW:180.0V Threshold setting for switch to PV input. For models of 220V: 0.75KW:100.0V 1.5KW~4.0KW:120.0V For models of 380V: 2.2KW~5.5KW:240.0V	0
P15.30	Threshold setting for switching to power frequency	0V-P15.31	If the PV voltage is lower than the threshold or the light is weak, it can be switched to power frequency input through relay output. (Note: The minimum operation voltage of the system is 60V.) If the value is 0, the function is disabled. The default value depends on model. For models of 220V: 0.75KW:60.0V 1.5KW, 2.2KW and 4KW:80.0V	Depend on model
P15.31	Threshold setting for switching to PV input	P15.30-400V	If PV voltage is higher than the threshold, after the delay time of P15.21, it can be switched to PV input through relay output. In order to avoid repeated switching, the threshold needs to be higher than the threshold of P15.30. If the value is 0.0, the function is disabled. The default value depends on model. For models of 220V: 0.75KW:100.0V 1.5KW, 2.2KW and 4KW:120.0V	Depend on model
P15.32	Delay Time of Dry-water	0~10000S	Delay Time setting of dry-water	5S

P15.33	Wake-up delay time of Dry-water	0~10000S	During the Dry-water warning, if the detected dry-water signal is cleared, the delay counts, after the time set by P15.33, the warning is cleared.	20S
--------	---------------------------------	----------	--	-----



Notice: The set value of the parameter cannot be modified on the running state. if inverter is in auto mode, but you need to set value of the parameter. First setting P00.01=0, manual operation mode settings, press  for 2s, then inverter stops control. then you can set the P00~P15 group of function parameter.

Troubleshooting

The inverter has complete protection. When a failure occurs, the inverter will take protective measures. The general protection is to stop the motor from running and forbid it to restart within a certain period.

Fault Code	Fault type	Possible Reasons	Solution
Power off	No failure	\	\
Inc OVP Dec OVP Const OVP	Overvoltage	1.Input voltage is too high 2.There is large energy feedback	1.Check the voltage of solar array 2.Check if the DEC time of the load is too short or the inverter starts during the rotation of the motor

DC Bus low Voltage	Undervoltage	1.Input voltage is too low; 2.Illumination intensity is too weak	Check the voltage of solar array
Inc OCP Dec OCP Const OCP	Overcurrent	1.The load of pump is too large; 2.The voltage of solar array is too low; 3.The motor wiring is too long 4.The power of the inverter is too low 5.The grounding is short circuited or the output is phase loss	1.Replace for a smaller pump; 2.Check voltage of solar array; 3.Shorten the wiring between inverter and motor 4.Select the inverter with a larger power 5. Check if the load is short circuited
Pump Overload	Water pump is overload	1.The motor setting rated current is incorrent 2.Input voltage is too low 3.Improper motor's overload protection threshold 4.Motor block or sudden change of load	1.Reset the rated cueernt of the motor 2.Inspect the input power supply 3.Set proper motor rated current 4.Check the load and adjust torque boost
Overload VF	Inverter is overload	1.Acc time is too short 2.Restart the rotating motor 3.Input voltage is too low 4.the load is too heavy	1.Increase the Acc time 2.Avoid restart after power off 3.Check the power supply 4.Select bigger capacity inverter
IGBT short	Module overcurrent	Output short circuit or grounding module damage	1.Check the wiring 2.Get after-sells support
Inv Overtemp	Module is over-temperature	1.Air flue is blocked 2.Environment temperature is too high	1.Clean air flue or improve ventilation 2.Degree the environment temperature
Rec Overtemp	Module is over-temperature	3.The time of overload runing is too long. 4.Control board abnormal	3.Select a proper motor 4.Ask for support
Phase out loss	Output default phase	Phase loss of U,V,W output (or a serious unbalance in 3phase input)	1.Check the output distribution 2.Check the motor and cable 3.Get after-sells support
Shortcut GND 1	Grounding short circuit	The output line may be connected with ground	Check the wiring
Curr fault	Current detection failure	1.The control board connection is in poor contact 2.The hall component is damaged The magnifying circuit is abnormal 3.The magnifying circuit is abnormal	1.Check the connector and rewire 2.replace the hall component 3.replace the main control panel 4.Get after-sells support

Lack load when set dry-power (P15.15) is not 0.0%	Water pump conducts “dry-operation”	1. Water pump’s connection wires are all open circuit. 2. Water sources are lacking of water	1. Check P15.15 parameter 2. Check whether the water pump wiring condition and water pump power meet the requirements of inverter capacity
Lack Water	Water shortage	Water shortage warning	1. If the water empty alarm function is enabled, the device automatically stops after the water empty alarm remains for a certain period of time, and no processing is needed. 2. If the water empty alarm function is not enabled, check whether there are terminals misconnected
Water Full	Water full	Water full warning	1. If the water full alarm function is enabled, the device automatically stops after the water empty alarm remains for a certain period of time, and no processing is needed. 2. If the water empty alarm function is not enabled, check whether there are terminals misconnected
Com Fault	Communication failure	Device or circuit damage	Reset Get after-sales support



Warning: Try to find out the failure reason before your try reset. If it can’t reset or suffers failure again

after reset, please try find out the reason first. Continuously resetting could damage the inverter.

Specifications

MODEL #	P2.2KT2	P4KT2	P7.5KT3	P11KT3	P15KT3	P18.5KT3	P22KT3
DC INPUT							
Max.DC voltage	450	450	900	900	900	900	900
Starting voltage	80	80	250	250	250	250	250
Recommended MPPT voltage	100～400	100～400	500-680	500-680	500-680	500-680	500-680
Max. DC current (A)	12	20	35	58	79	96	116
Number of input channels	1	2	2	3	3	3	3
AC INPUT							
Input voltage	1PH 220～240V (-15%～+10%)	N/A	N/A	N/A	N/A	N/A	N/A
Rated input current	24A	N/A	N/A	N/A	N/A	N/A	N/A
Input frequency	47～63 Hz	N/A	N/A	N/A	N/A	N/A	N/A
AC input terminal	L,N, PE						
AC OUTPUT							
Rated output power	2200W	4000W	7500W	11000W	15000W	18500W	22000W
Rated output current	14	10	18	24	30	39	45
Output wiring mode	1P1L	3P3L	3P3L	3P3L	3P3L	3P3L	3P3L
Recommended Motor Power	2HP	3HP	5HP	9HP	11HP	15HP	18HP
Output voltage	0～220V	0-380V	0-380V	0-380V	0-380V	0-380V	0-380V
Output frequency	0～50/60Hz						
CONTROL PERFORMANCE							
Control mode	Variable Frequency Drive(VFD)						
Asynchronous motor Voltage	1PH/3PH 220V	3PH 380V					
PROTECTION FUNCTIONS							
Output overcurrent	YES						
Output overlope	YES						
Output short-circuit	YES						
Dry/Overflow protection	YES						
OTHERS							
Display	LCD						
Communication	GPRS (Optional Accessory)						
Certificate Standard	CE						
Unit Dimensions (W*D*H)	370*335*135mm 14.56*13.2*5.3"	455*360*153mm 17.9*14.2*6"	563*346*148mm 22.2*13.6*5.8"	563*346*148mm 22.2*13.6*5.8"	550*410* 178mm 21.7*16*7"	550*410* 178mm 21.7*16*7"	550*410* 178mm 21.7*16*7"
Packing Size	535*415*235mm 21*16.3*9.3"	595*415*255mm 23.4*16.3*10"	645*445*265mm 25.4*17.5*10.4"	645*445*265mm 25.4*17.5*10.4"	650*510*300mm 25.6*20*11.8	650*510*300mm 25.6*20*11.8	650*510*300mm 25.6*20*11.8
Net weight(kg)	6KG/13.2lbs	9KG/19.8lbs	11KG/24.2lbs	15KG/33lbs	16KG/35.2lbs	16KG/35.2lbs	16KG/35.2lbs
Gross weight(kg)	9KG/19.8lbs	12KG/26.4lbs	15KG/33lbs	19KG/41.6lbs	20KG/44lbs	20KG/44lbs	20KG/44lbs
Operation temperature range	-25～60℃ (with derating above 45℃)						
Environmental Protection Rating	IP65						
Cooling	Natural cooling						
Altitude	2000m (with derating above 2000m)						
Relative humidity	0～100%						

SAVE THIS MANUAL!

**READ THIS MANUAL BEFORE INSTALLATION, IT
CONTAINS IMPORTANT SAFETY, INSTALLATION AND
OPERATING INSTRUCTIONS. KEEP IT IN A SAFE PLACE
FOR FUTURE REFERENCE.**

**Sigineer Power Limited
Email: info@sigineer.com
TEL: +86 769 82817616**